

How to clean floor grout & tiles with the Britex Deep Cleaning Machine



Live clean, love Britex.

- 1** Firstly, set up your Britex Machine for grout and tile cleaning. Pull back the brass sleeve on the end of the of the black solution hose and attach it to the grout & tile wand underneath the trigger until it locks into place. Release the sleeve.



- 2** Pull back the smaller brass end of the black solution hose and insert it into the connection under the button at the front of the machine under the vacuum and pump switches.



- 3** Connect one end of the larger vacuum hose to the Tank A dome lid, and the other end to the carpet wand tube just above the wand trigger.

NOTE: De-foamer is NOT required for grout and tile cleaning.



Call our Helpline on 1800 804 973 for assistance.

www.britex.com

4 Fill Tank B with 9L of hot water, ensuring the water level does not go above the filter.

Add 3 capfuls of Britex Grout & Tile Cleaning solution.



5 Plug the machine into your power point.



6 Attach the brush refill to the wand by gently pushing the wand head down to the refill until it locks firmly into place.



7 To rotate the grout & tile head, simply press down the lever and move the head to the desired position, ensuring the pin locks securely into the hole.




8 **Turn on only the 'pump' button** on the Britex machine and apply the brush section of the refill head to the grout line. Hold in the wand trigger to apply water and solution to grout lines. Release the trigger and scrub along the grout line in a back-and-forth motion until clean.



Call our Helpline on 1800 804 973 for assistance.

www.britex.com

- 9** Once you've completed cleaning the selected areas of grout, position the wand head to the horizontal mopping position. **Turn on both the pump & vacuum buttons** on the Britex machine.

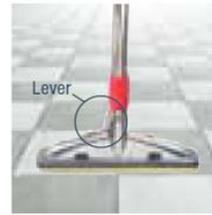

**TILE MOPPING
POSITION HORIZONTAL**

During mopping, apply water to the tiles as needed using the spray trigger. To extract water from the tiles, lift the edge of the mop that is closest to you slightly off the ground so that the mop head is tilted. Mop over the tiled area, bringing the wand head towards you, extracting water as it goes.

Repeat this process until all of the desired area of grout and tiles are cleaned.

- 10** Periodically check tank A, discard the dirty water when required.

When you are finished cleaning

Release any unused solution from Tank B using the tap at the back of the machine and empty out the dirty water from Tank A. Rinse out the dome lid and filter. Clean the machine thoroughly before returning it to store.

STILL NEED HELP?

Watch our how-to videos at [Britex.com/support](https://www.britex.com/support)

OR call us 7 days a week on 1800 804 973.

Call our Helpline on 1800 804 973 for assistance.

www.britex.com